

Infra-red Foul Unit


Version 2.0 - PIC microprocessor controlled

The 4 pin plug supplies both 12VAC and a switched NO relay contact.

Use whichever your machine and/or scoring system requires.

To machine (or auto-score) foul input

Fuse for 240V:
AC 240V (located on front side of black terminal safety cover)
- 1.25A M205 fast-blow

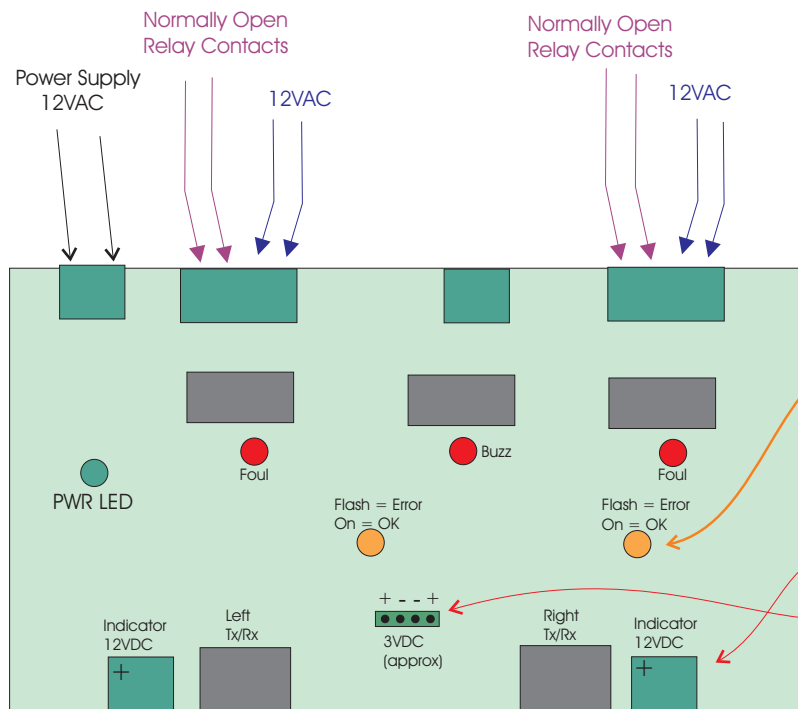

AMBER LEDs
ON = Beam aligned ok
FLASHING = Infra-red module not receiving signal from reflector. Beam may be blocked, weakened or is mis-aligned

Optional LED indicator connectors:
OLDER style - 2 separate 12VDC connectors on the outboard sides of the TX and Rx connectors
NEWER style - one 3VDC connector towards the centre of the board

